

INSTRUCTION MANUAL

31426c
elpine
A NAME YOU CAN TRUST!

2000W STAINLESS STEEL SOLEPLATE STEAM IRON



- Dry ironing/Spray ironing
- Burst of Steam • Variable steam ironing
- Stainless steel sole plate
- Over heating protection • Indicator light
- Transparent water tank with beaker
- Self-cleaning function
- AC 220-240V 50/60Hz


RoHS ✓ CE



Elpine B20 3BT UK

Images are for illustrative purposes only,
actual product may vary.

DESCRIPTION OF PARTS

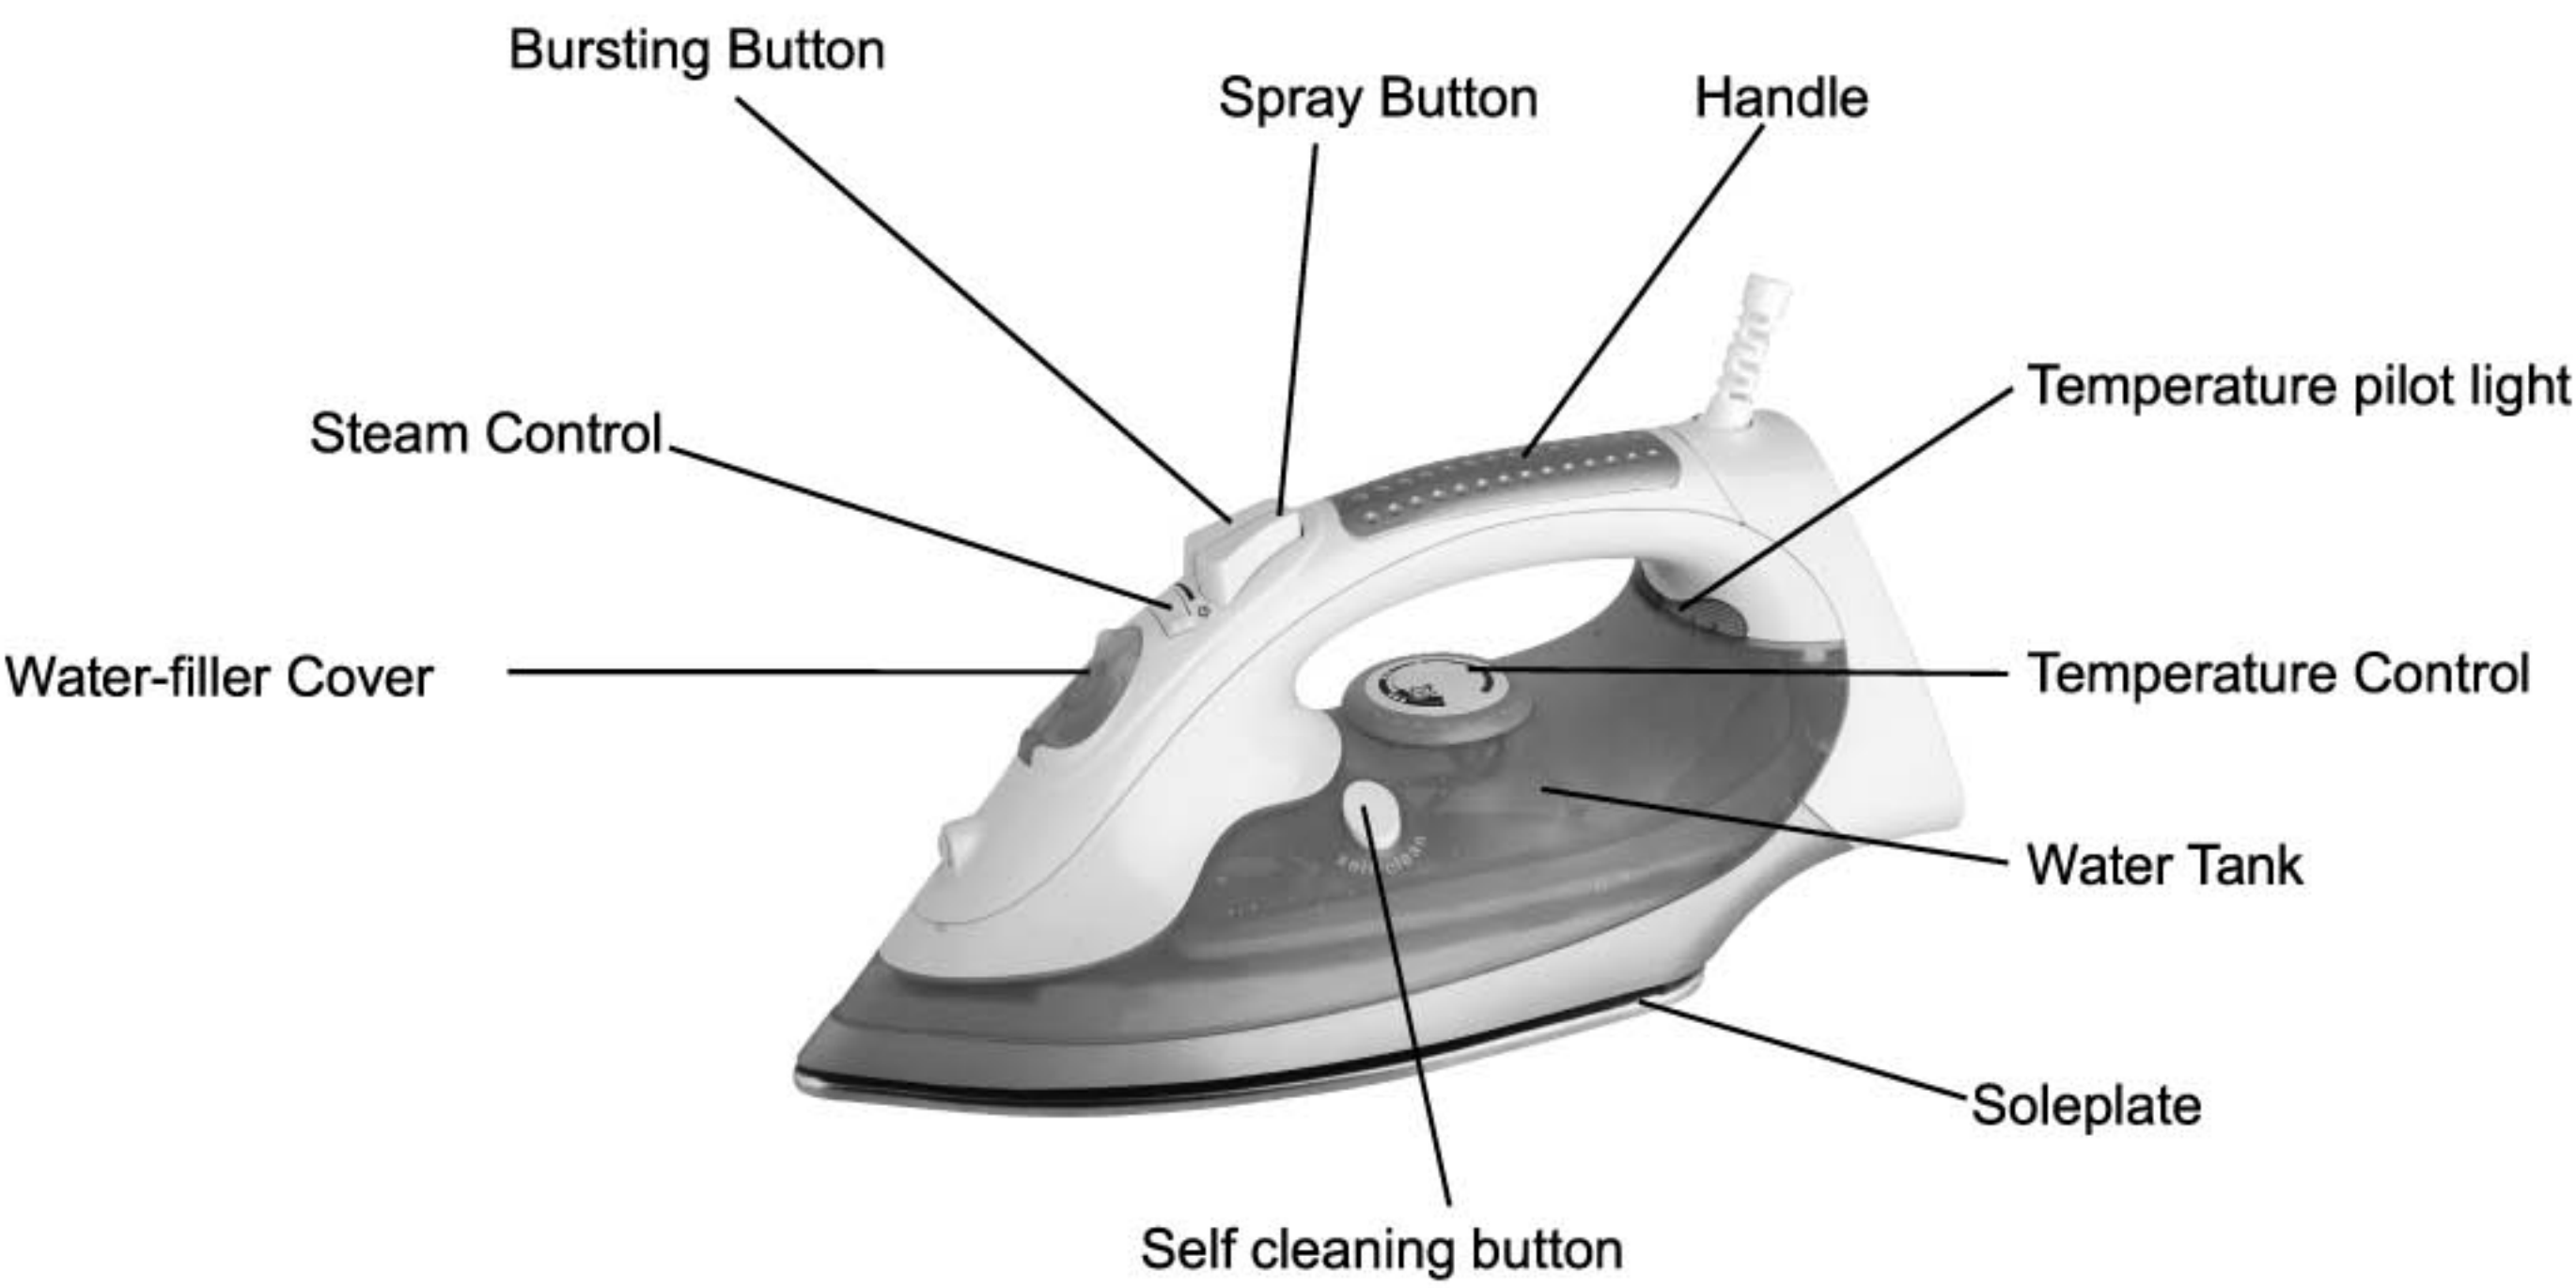

TECHNICAL PARAMETER

Rated Voltage	AC 220V-240V	Feature	Steam/Dry/Spray/Burst of steam
Rated Frequency	50/60Hz		Vertical steam/variable steam
Rated Power	2000W		Stainless Steel soleplate

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

- The user must not leave the iron unattended while connected to the supply.
- The plug of the supply cord must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron shall be used on a stable ironing board.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The iron shall not be used if the iron has been dropped at any time, or if there are visible signs of damage or if the iron is leaking. The iron shall be sent to the manufacturer or his qualified service agent before further use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Care should be taken when using the appliance due to the emission of steam.
- Do not touch hot surfaces. Use handle or knobs
- To protect against electrical shock, do not immerse cord, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before storing
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the factory for examination, repair or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect. Remove plug from outlet. Let iron cool completely before putting away.
- Loop cord loosely around iron when storing.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when turning the iron upside down, there may be hot water in the water tank.
- If an extension cord is absolutely necessary, a 10 ampere cord should be used.
- Do not use this appliance for anything else other than its intended use. This appliance is for household use only.

2. HINTS BEFORE FIRST USE

- Some parts of the iron have been slightly greased and as a result the iron might smoke slightly when switched ‘ON’ for the first time. After a short while, this will cease.
- Before using for the first time remove any sticker or protective foil from the soleplate with a soft cloth.
- Keep the soleplate smooth: do not scratch against metal objects (e.g. rack of ironing board, buttons, zippers)
- Pure woolen fabrics (100% wool) may be pressed with the iron set to a steam position. Preferably select steam selector position and use a dry pressing cloth.

3. SETTING THE TEMPERATURE

- Always check first to see whether ironing instructions are attached to the article to be ironed (they can be found on a label showing a drawing of an iron. The numbers of dots indicate the correct temperature. Refer to the indications on the temperature dial and in the table below). Follow these ironing instructions in all cases.
- If ironing instructions are missing but you do know the kind of fabric, then see the below. The table is valid for the actual materials and do not concern any applied finish, gloss etc.
- Textile to which some kind of finish has been applied (gloss, wrinkle relief etc.) can best be ironed on somewhat lower temperatures.
- Sort the fabrics out according to ironing temperature first: wool with wool, cotton with cotton, etc. The iron heats up quicker than it cool downs. Therefore, start ironing the articles requiring the lowest temperature such as those made of synthetic fibres. Then progress to higher ones.
- Turn the temperature control knob round until it is opposite the setting pointer.

	Textile	Temperature control	Instruction on label
MIN	Synthetics	Low temperature	Always Refer
◦	Silk	Normal temperature	Always Refer
◦◦	Wool	Normal temperature	Always Refer
◦◦◦	Cotton	Normal & high temperature	Always Refer
MAX	linen	High temperature	Always Refer

4. HOW TO FILL WITH WATER

- Remove the plug from the stock
- Fill the water through the filling opening into the water tank.
- If the water is very hard, it is advised to use distilled water or demineralized water only. Do not use chemically descaled water.
- Pour out the remaining water after use.

5. SURGE STEAM IRONING

The surge-of-steam feature provides powerful steam for removing stubborn wrinkles.

- Fill the iron with water as described in “How to fill with water”.
- Plug iron into electrical outlet.
- As indicated on the temperature control knob, steam ironing is only possible at higher temperature setting indicated with ‘MAX’ mark, otherwise the water will leak from the soleplate.
- Turn the temperature control knob to the position according to the fabric being ironed as described in point 4 of ‘Setting the temperature’
- The indicator light will turn ‘OFF’ when the indicated setting reaches the correct temperature.
- Press the Steam jet button to release the surge-of-steam. Pressing the button several times may be necessary to prime the surge system..
- Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.
- NOTE: For optimum steam quality, do not apply more than four successive ‘SHOT’ after the indicator light goes off.

6. CLEAN & MAINTENANCE

- Please unplug the iron and allow to cool the heating plate when carry out the maintenance.
- Warning: To protect against electric shock, do not immerse cord, plug, or appliance in water or any other liquid.

7. SELF CLEAN

- The function of self clean is to clean the soleplate when you use this iron about half of year.

You must be:

1. Fill the iron and plug in;
2. When the temperature attaches “MAX”, press the self clean-Button for about 1 minute;
3. Plug into power in order to dry the water in soleplate off
4. Conduct self cleaning only with a basin to collect all water. Otherwise the hot water will be spilled maybe over the user.

NOTE : THE SOLEPLATE OF STEAM IRON MUST TO BE DRIED AFTER USE

UK PLUG REWIRING

Your appliance operates on 2000W-220-240V-50/60Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows:

IMPORTANT:


The wires in the mains lead are coloured in accordance with the following code:

BLUE : NEUTRAL (N)

BROWN : LIVE (L)

GREEN & YELLOW : EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

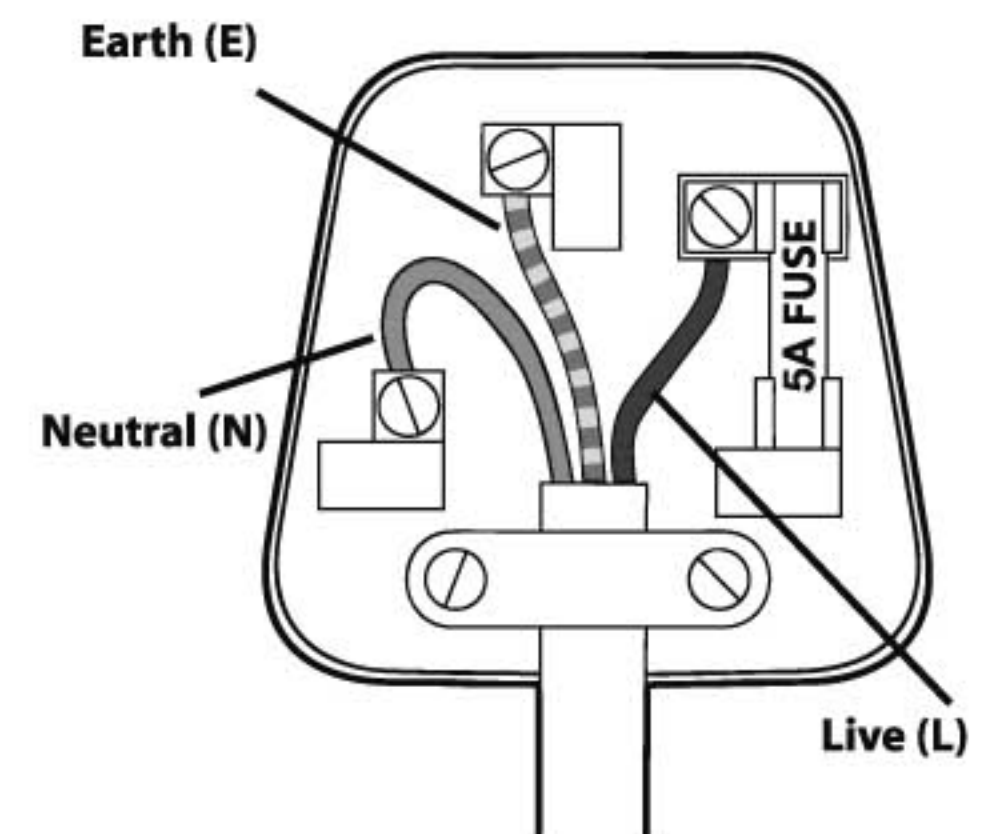

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or  or coloured GREEN.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

This appliance must be protected by a 5-amp fuse in a 5-amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS 1362 fuse.

**THIS IS NOT A TOY: KEEP THIS PRODUCT OUT OF REACH OF CHILDREN.
THIS APPLIANCE IS NOT INTENDED FOR USE BY CHILDREN.**

2000W STAINLESS STEEL STEAM IRON



31426c
elpine
A NAME YOU CAN TRUST!



Elpine B20 3BT UK

